


Wireless Security Alarm Siren User Manual

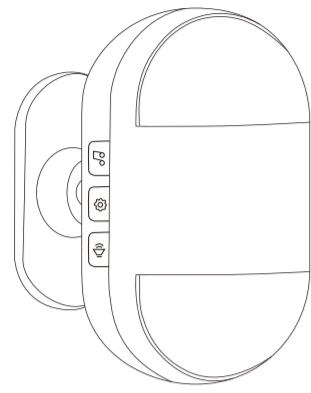

Low Battery Reminder

When the siren is low power, the LED flashes once every 40 seconds, and the siren sounds three beeps.

Technical Specifications

Quantity of connected pager: 20pcs pagers
Power supply: external 5V DC power supply/
3 AAA batteries
Standby current: <30uA
Working current: <120mA
Shutdown current: <30uA
Wireless distance: <100 meters
Alarm volume: 0dB, 80dB, 100dB or 120dB
Alarm time: 30 seconds/ 1 minute/ 3 minutes/
10 minutes (optional)
Operating humidity: <80%

7

Product Introduction

When the pager is pressed, the siren will alarm with sound and flash light. It has the characteristics of strong anti-interference ability, anti-false alarm, anti-missing, etc. The siren is widely used in banks, hospitals, warehouses, schools, factories, shops and so on, to protect the personnel and property security.

The siren should be installed in the center of the house as much as possible to balance the best reception of all button pagers. Keep the installation location of siren away from large metal objects or electrical equipment with high frequency interference, while avoiding shields such as reinforced concrete walls and fire doors.

Function Introduction


- 1) The siren can connect with external alarm device to make the alarm sound louder.
- 2) Press "CALL" key on the button, the siren will alarm. Press "CANCEL" key on the button or SHORT press any keys on the siren, alarm will be canceled.

1


Safety Warning

- 1) This device is not waterproof. Please do not soak it in water.
- 2) Please take out batteries if you don't use the device for an extended period of time.
- 3) Do not disassemble the device violently.
- 4) If you encounter problems that cannot be solved, please contact our after-sales team in time.

Product Overview

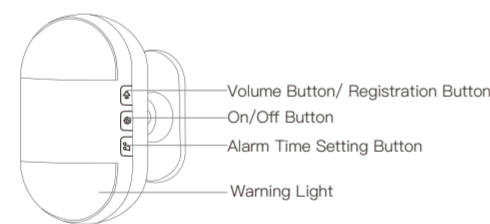

2

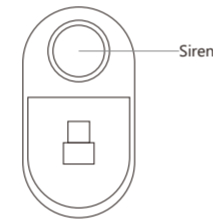

Power on and off

① Power on by charging

When the siren is in the power-off state (neither with built-in batteries nor connected to USB charger), it will automatically power on as long as the siren is installed with AAA battery or connected to USB for charging.

② Power on by pressing the button

When the siren is in the power-off state (Connected to the power supply), LONG press the [⊙] key, and the siren will be powered on with a quick beep and LED light flashes once.

③ Power off by disconnecting the power

Remove the battery or USB charger, and the siren will be powered off.

3

④ Power off by pressing the button

In the power-on state, LONG press the [⊙] key. The LED light will flash once with a long beep sound, and then the siren will be powered off.

Alarm Time Selection

After powering on, SHORT press [♪] key to select alarm time. (Default alarm time is 3 minutes.)

When the LED light flashes once with one beep sound, alarm time lasts 30 seconds.

When the LED light flashes twice with two beep sounds, alarm time lasts 1 minute.

When the LED light flashes three times with three beep sounds, alarm time lasts 3 minutes.

When the LED light flashes four times with four beep sounds, alarm time lasts 10 minutes.

Volume Adjustment

After powering on, SHORT press the [🔊] key to adjust the volume to be 0dB, 80dB, 100dB or 120dB. (Default volume is 120dB.)

4

Register Pagers

LONG press the [🔊] key after powering on, and the siren's detection light is on. At this time, press "CALL" on the pager to register to the siren.

- ① When the registration is successful: the siren indicator flashes 2 times and beeps twice;
- ② When the registration is repeated: the siren indicator flashes 1 time and beeps once;
- ③ When the registration is full: the siren indicator flashes 3 times and beeps three times.

After the registration, SHORT press the [🔊] key, then the siren's detection light is off. Then the registration is done.

Note:

- 1) The siren can register 20pcs button pagers at most.
- 2) During the registration process, SHORT press any key on the siren or no action for more than 20 seconds, then the siren will exit the registration mode.

5

Delete Pagers

LONG press the [🔊] key after powering on. The siren's detection light is on. Then long press [🔊] key for 5 seconds again. The siren's detection light flashes 5 times and the siren beeps 5 times. All the registered pagers are deleted.

Restore Factory Settings

Step 1: Unplug the power supply and remove the batteries;

Step 2: Press and hold the [♪] key;

Step 3: Connect the power supply (batteries or USB charger) while pressing and holding the [♪] key. The siren will beep 10 times, and then the LED light will flash 5 times quickly with 5 rapid beeps.

Step 4: Then release the [♪] key. The all pagers will be deleted and the siren will restore to factory settings. (Alarm time becomes 3 minutes and alarm volume becomes 120dB.)

6